





### Seat height adjustment: (1)

To raise the seat height, remove weight from the seat and pull up on the height adjustment lever, release the lever when reaching the desired position.

To lower the seat height, while seated, pull up slowly on the height adjustment lever until the seat is at the desired height.

### Seat angle adjustment: (2)

To change the seat angle, while seated, pull up the adjustment lever, move backwards or frontwards to desired position, then release the adjustment lever to lock.

### Seat width adjustment:

To adjust the seat width, pull up the lever (3) to unlock, pull or push the both seat to proper position, then push down the lever to lock.